

Singsing-Probe


Touch any electric part.
Lamp and Beep on.
Then you know what to do.

■ User's Guide

1. Please see where the coiled part is located.



2. Before measuring, see which side of Singsing-Probe is more sensitive. Then put it on the surface of the coiled part. (Each side of "○" and "◇" has a different sensitivity depending on a kind of actuator.)

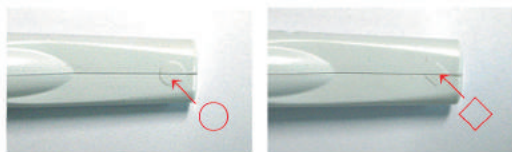

3. Once you check out Relays or Parts of rapid pulse, move it from side to side.



■ Parts examined by Singsing-Probe

