

ECU Saver [GN-710]

Saves you from the worries about erase of the data when you separate terminal from battery!


Instruction

1. **Compatible OBDII vehicle** – Connect the clamps to battery. Then, the green light of battery connection lamp turns on. Plug ECU Saver to OBDII connector of vehicle. (put Ignition key off)

Non-compatible OBDII vehicle – Turn the ignition key to "ACC". Plug the cigar jack cable to cigar jack of vehicle.


2. Pull out the negative terminal(-) of a battery in vehicle.

About front lamps

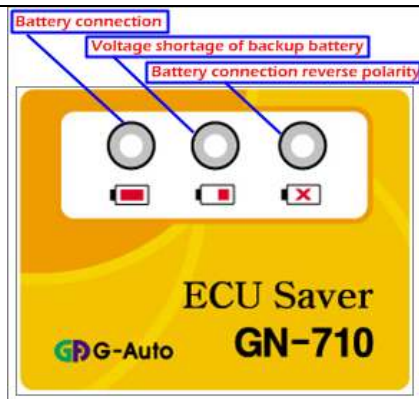

What's included

1. ECU Saver
2. Cigar jack cable

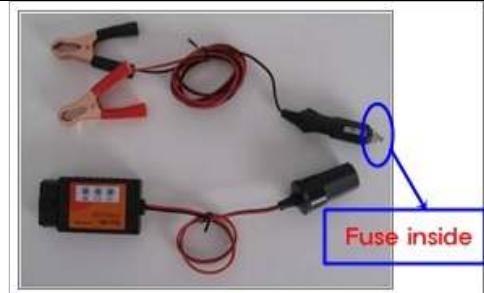

ECU Saver Applications



※ Note

* Even if the clamps are reversely connected, no damage causes in your vehicle.

The internal circuit of ECU Saver will automatically block the power.

* Overload may cause damage in a fuse of cigar jack.

If you need to replace of it, turn the tip of male cigar jack and change the fuse with new one.